

VIN TABLE

TOP

MANUAL LIST

HOW TO APPLICABLE

Model A:

The VIN within the range shown in the table are categorized as "Model A".

⊗JSAFJA33V00100001⊗	～
⊗JSAFJB33V00100001⊗	～
⊗JSAFJB33VW4100001⊗	～
⊗JSAFJB33VX0100001⊗	～
⊗JSAFJB33VY0100001⊗	～
⊗JSAFJB33VY4100001⊗	～
JS3JB33V□14100001	～
JS3JB33V□X4100001	～
JS3JB33V□Y4100001	～
JB33V-100001	～
JB33W-100001	～

□: Check digit (0-9)

Model B:

The VIN within the range shown in the table are categorized as "Model B".

⊗JSAFJA43V00100001⊗	～	⊗JSAFJA43V00140000⊗
⊗JSAFJB43V00100001⊗	～	⊗JSAFJB43V00140000⊗
⊗JSAFJB43V10100001⊗	～	
⊗JSAFJB43V14100001⊗	～	
⊗JSAFJB43V20100001⊗	～	
⊗JSAFJB43V24100001⊗	～	
⊗JSAFJB43VW0100001⊗	～	
JS3JB43V□14100001	～	
JS3JB43V□24100001	～	JS3JB43V□24140000
JB43W-100001	～	

□: Check digit (0-9)

Model C:

The VIN within the range shown in the table are categorized as "Model C".

⊗JSAFJA43V00140001⊗	～	⊗JSAFJA43V00160000⊗
⊗JSAFJB43V00140001⊗	～	⊗JSAFJB43V00160000⊗
⊗JSAFJB43V20140001⊗	～	
⊗JSAFJB43V24140001⊗	～	
⊗JSAFJB43V30140001⊗	～	⊗JSAFJB43V30160000⊗
⊗JSAFJB43V34140001⊗	～	⊗JSAFJB43V34160000⊗
JS3JB43V□24140001	～	
JS3JB43V□34140001	～	JS3JB43V□34160000

□: Check digit (0-9)

Model D:

The VIN within the range shown in the table are categorized as "Model D".

⊗JSAFJA43V00160001⊗	～	
⊗JSAFJB43V00160001⊗	～	⊗JSAFJB43V00200000⊗
⊗JSAFJB43V30160001⊗	～	
⊗JSAFJB43V34160001⊗	～	⊗JSAFJB43V34200000⊗
⊗JSAFJB43V40160001⊗	～	
⊗JSAFJB43V50160001⊗	～	
JS3JB43V□34160001	～	JS3JB43V□34200000
JS3JB43V□44160001	～	
JS3JB43V□54160001	～	JS3JB43V□54200000

□: Check digit (0-9)

Model E:

The VIN within the range shown in the table are categorized as "Model E".

⊗JSAFJB53V00100001⊗	～	⊗JSAFJB53V00200000⊗
---------------------	---	---------------------

VIN TABLE

TOP

MANUAL LIST

HOW TO APPLICABLE

Model F:

The VIN within the range shown in the table are categorized as "Model F".

⌘JSAFJB43V00200001⌘	～	⌘JSAFJB43V00300000⌘
⌘JSAFJB43V60200001⌘	～	⌘JSAFJB43V60300000⌘
⌘JSAFJB43V34200001⌘	～	
JS3JB43V⌘34200001	～	
JS3JB43V⌘54200001	～	
JS3JB43V⌘64200001	～	JS3JB43V⌘64300000
⌘JSAFJB53V00200001⌘	～	⌘JSAFJB53V00300000⌘

⌘: Check digit (0-9 and x)

Model G:

The VIN within the range shown in the table are categorized as "Model G".

⌘JSAFJB43V00300001⌘	～
⌘JSAFJB43V60300001⌘	～
⌘JSAFJB43V64300001⌘	～
⌘JSAFJB43V70300001⌘	～
JS3JB43V⌘64300001	～
JS3JB43V⌘74300001	～
⌘JSAFJB53V00300001⌘	～

⌘: Check digit (0-9 and x)